



### PARTS SHOW

**A**

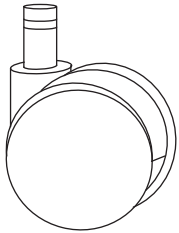

Casters x 5

**B**




Five-star tripod x 1

**C**




Aerobar x 1

**D**

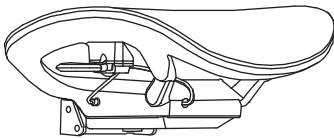


Chassis x 1

**E**

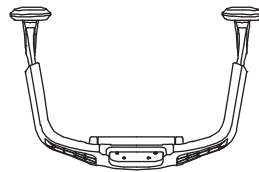


Armrest x 1

**F**

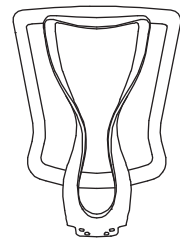


Backrest x 1

**G**

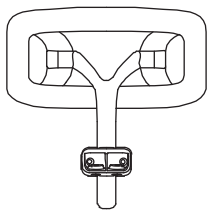


Headrest x 1

**H**



M10\*34 x 4

**I**




M8\*25 x 4

**J**



M8 x 4

**K**



M6\*20 x 2


**L**




M5 x 1

# INSTALLATION STEPS


STEP 1

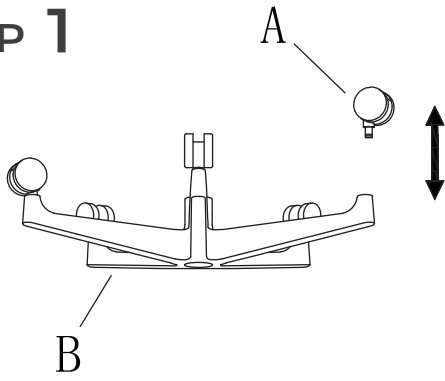


STEP 2

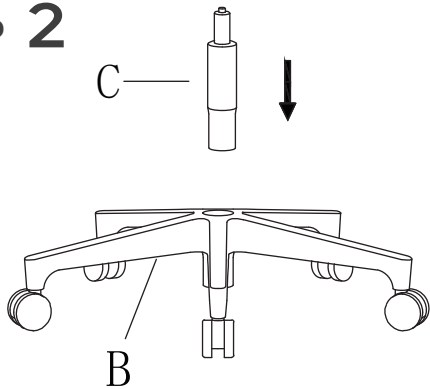


STEP 3

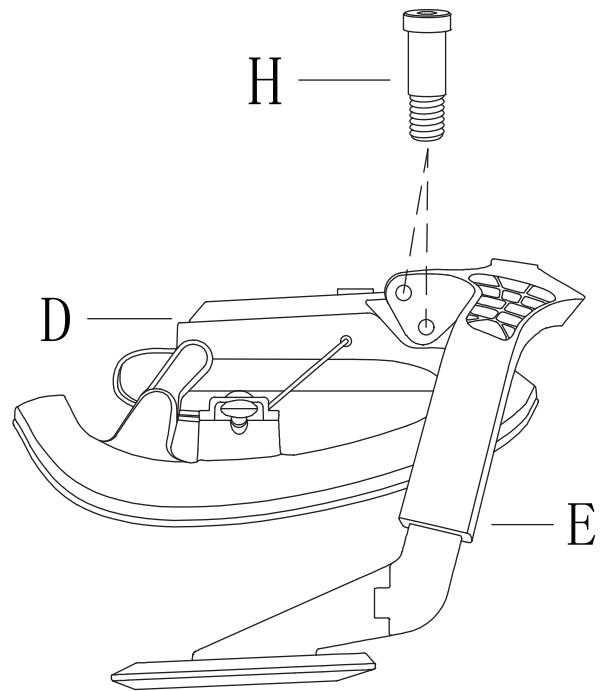


STEP 4

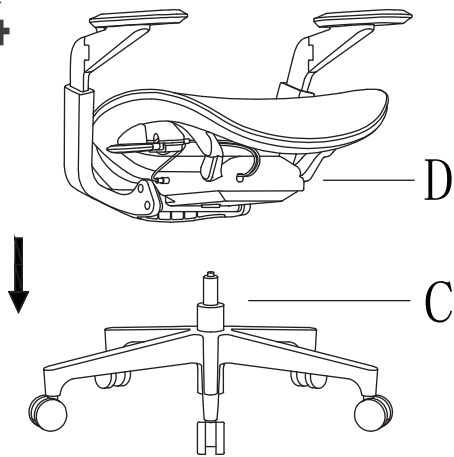

STEP 5

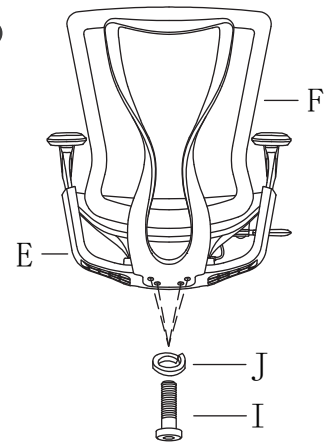

STEP 6

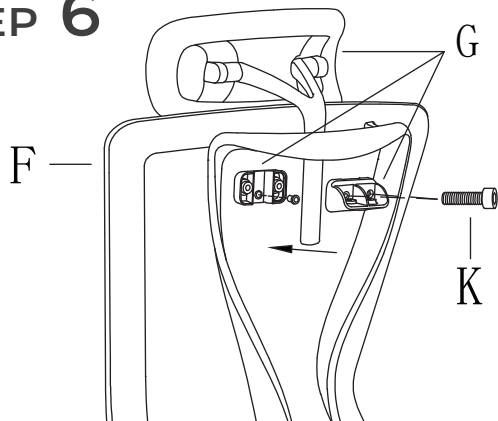

STEP 7

